Kitchen Garden Assembly Instructions






AA - End Panel

BB - Side Panel

CC - Bottom

DD - Shelf

To assemble your Kitchen Garden you need only a Phillips Screwdriver

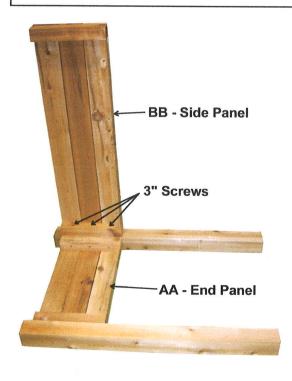


Step 1

Position End Panel AA on flat surface.

Using 3 of the supplied 3" screws, attach *Side Panel BB* to *End Panel AA*, being careful to align inside edges of both *Panels*.

Step 2

Using 3 of the supplied 3" screws, attach second *Side Panel BB* to *End Panel AA*, again being careful to align inside edges of both *Panels*.

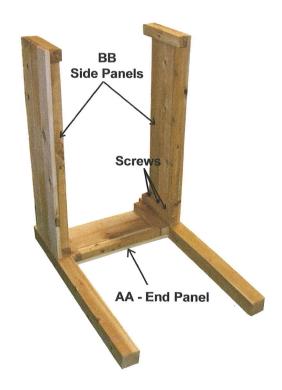

Step 3

Using 6 of the supplied 3" screws, attach partial assembly in step 2 to second *End Panel AA*, being careful to align inside edges.





Step 4


Position *Shelf DD* with the top edge of support cleats aligned with the *Shelf Positioning Marks* and secure using 3" screws.



Step 5



Insert *Bottom CC* (landscaping cloth up) onto *Side Panel Cleats* and secure using 2" screws.

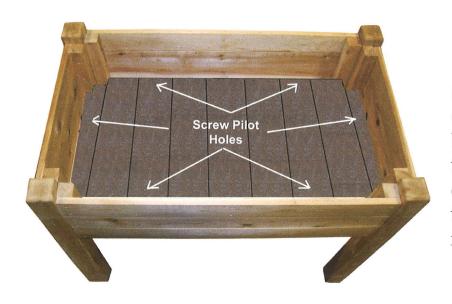

* The 6 pilot holes for the 2" screws are found around the edge of the *Bottom CC* and can be accessed by carefully lifting the edge of the Landscaping cloth. Inserting the screws through the landscaping cloth is not recommended.

Your Kitchen Garden is now assembled and ready for your enjoyment.