
 



End Panel - AA
(front)

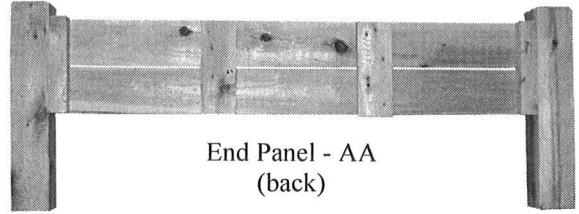


End Panel - AA
(back)



 
Side Panel - BB
(front)



Side Panel - BB
(back)

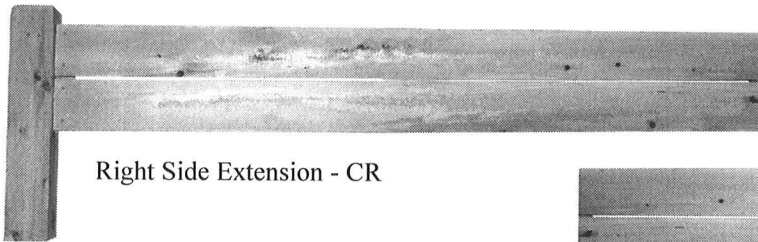


Right Side Extension - CR

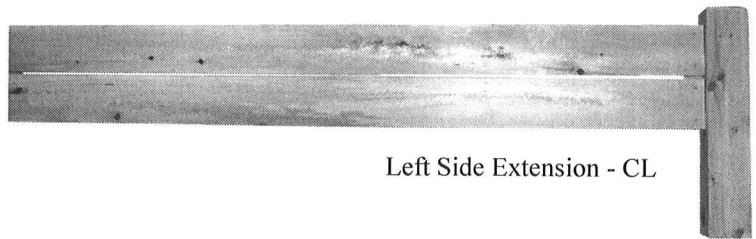


Left Side Extension - CL

To assemble your **Raised Garden** you need only a phillips screwdriver

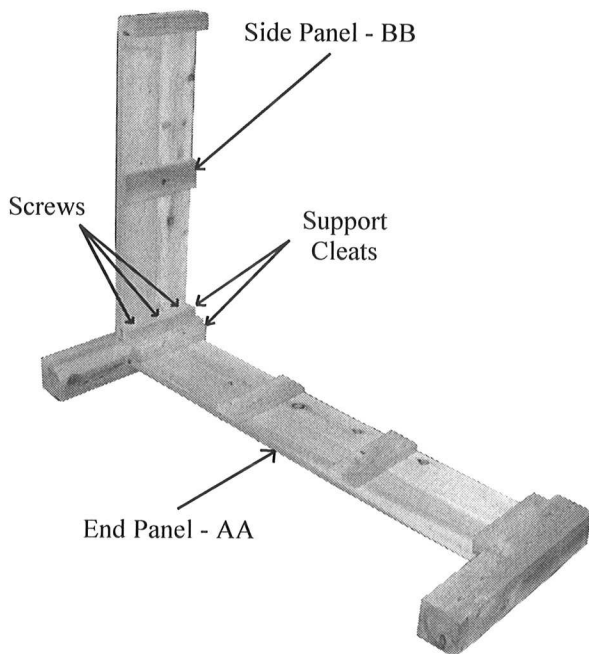

Step 1



Attach *Side Panel BB* to *End Panel - AA* using supplied 3" screws, being careful to align inside and bottom edges of support cleats.

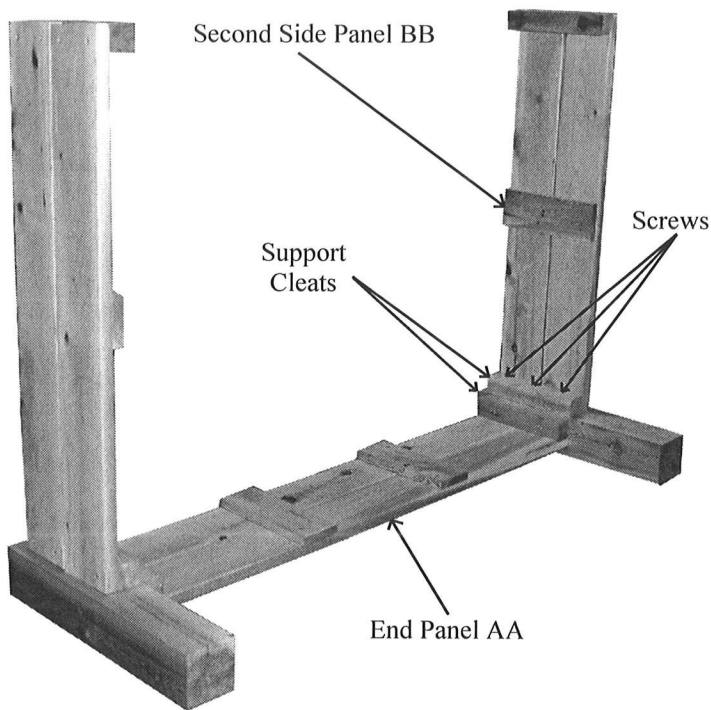

Step 2


Attach second **Side Panel BB** to **End Panel AA** using the supplied 3" screws, again carefully aligning the inside and top edges of the support cleats

Step 3

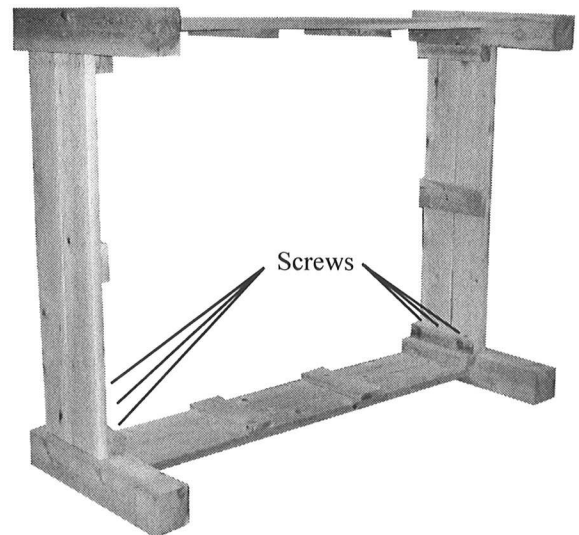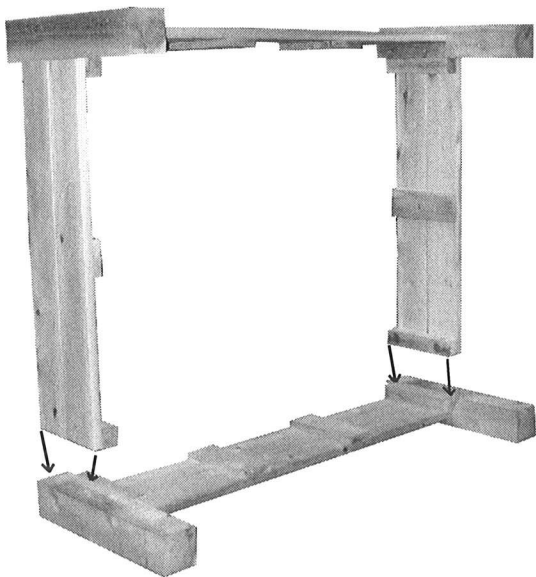


Attach partial assembly from Step 2 to second **End Panel - AA** using the supplied 3' screws, while carefully aligning the inside and top edges of the support cleats on both sides of the assembly.

If you are adding an **Extension** to your **Raised Garden** first attach both the *Right Side Extension - CR* and the *Left Side Extension - CL* to the legs of *End Panel AA* using the supplied 3” screws, while carefully aligning the inside and top edges of the support cleats on both sides.

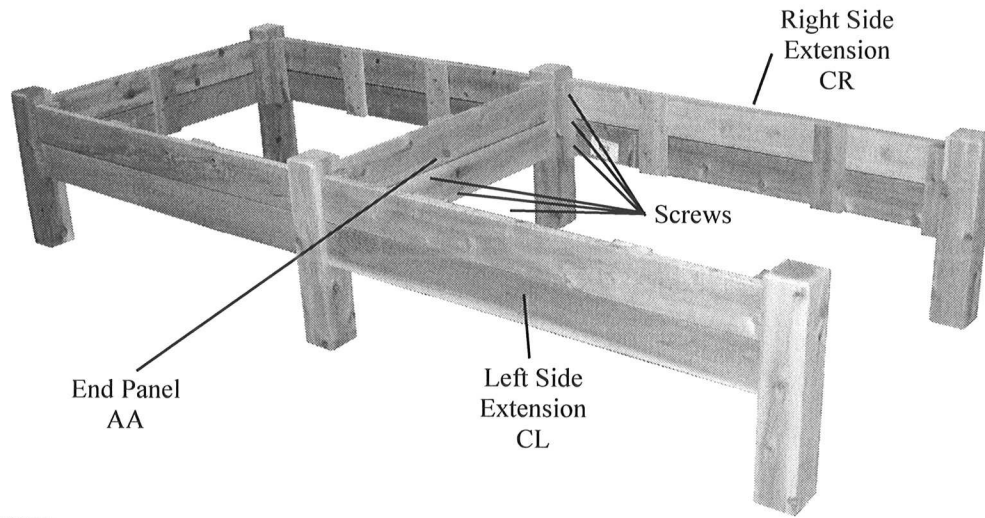

Once both the *Right Side Extension - CR* and *Left Side Extension - CL* are attached to the legs of *End Panel - AA*, remove *End Panel - AA* and attach it to the ends of both the right and left *Side Extensions* using the supplied 3” screws.

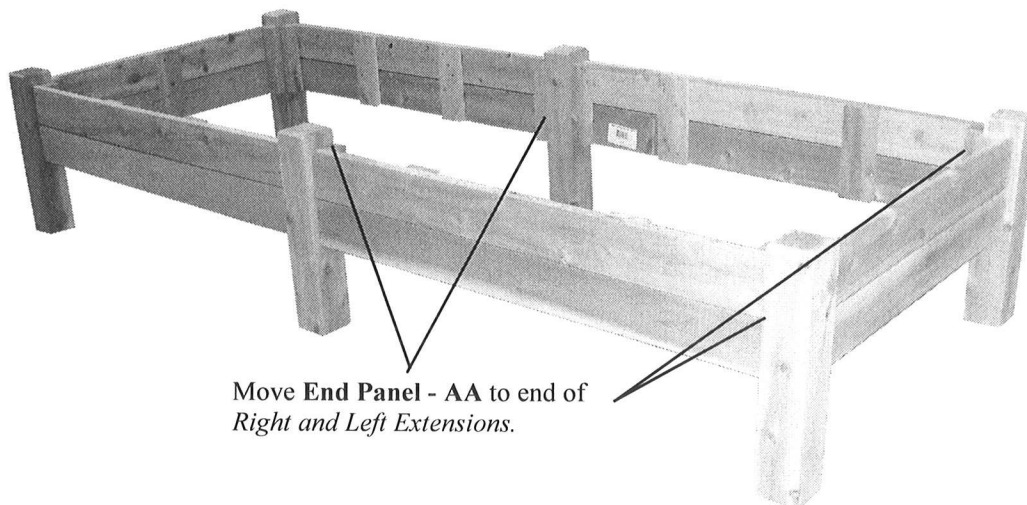

* When inserting the legs of your Raised Garden into the ground, make the depth each hole deep enough so that the bottom edges of the side panels rests on the surface.